

DIPスイッチ設定参考

Bass 設定

周波数目安	SW組み合わせ
	0
80	1
69	2
61	1 2
53	3
48	1 3
44	2 3
40	1 2 3
34	4
32	1 4
30	2 4
28	1 2 4
26	3 4
25	1 3 4
24	2 3 4
22	1 2 3 4

Treble 設定

周波数目安	SW組み合わせ
	0
20k	1
12k	2
8k	1 2
4.7k	3
3.7k	1 3
3k	2 3
2.6k	1 2 3
2k	4
1.8k	1 4
1.6k	2 4
1.5k	1 2 4
1.3k	3 4
1.2k	1 3 4
1.15k	2 3 4
1.05k	1 2 3 4